

Owner Instruction Manual



INTRODUCTION

Thank you for purchasing our **PistoIPROBE**. You have purchased one of the most deepest seeking probes on the market. The PistoIPROBE will not only help you locate your finds quickly during recovery, but will also save you from possibly damaging a valuable find by not hitting it with your digging tools.

Happy hunting and good luck,

DetectorPro

BATTERIES

First you must install two batteries into your **PistolPROBE**. Use (2) good quality 9-volt alkaline batteries. This is very critical to the performance of your probe. You will get many hours of use since most operators will only use the pushbutton, therefore only turning the probe "on" for a few seconds during target location. The battery compartment is located in the bottom of the handle grip. Unscrew the door and install batteries on the clips noting the correct polarity alignment. You are now ready to begin operation.

CONTROLS







Pushbutton: (top of probe) When you have the probe tuned to your liking, all you will have to do is push the button down and hold. This will engage probe.

Full-Time Power ON/LED/HI/LO: (rotary selector switch inside compartment)

Full-Time Power ON: If you need probe on all the time without holding the pushbutton down just turn switch on.

LED: Use this feature if you want to see LED flash over target instead of audio.


Hi: Higher audio volume of signal.

Lo: Lower audio volume of signal.

Frequency Control: Adjust this control if you are getting electrical interference (from your detector).

Threshold Control: Tunes probe and adjusts the sensitivity level of the probe.

OPERATION

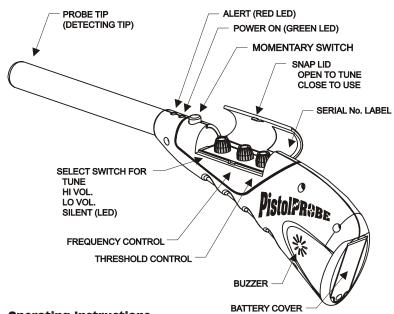

Operating Instructions:

Open up the top compartment snap door. Move the selector switch indicator so it lines up with the **full-time power on** tuning position. Go to **threshold control** (tuning) and keep probe away from metal. If your unit is already sounding off, turn threshold knob counterclockwise until the sound stops. If you want to set it at maximum **sensitivity**, turn threshold knob more clockwise until you start to hear slight "clicks". If you wish to run silent, you will still get good depth penetration. If your unit is silent when you first turn it on, turn threshold knob clockwise until you hear slight "clicks".

The **frequency control** is used only if other electronics are interfering with the probe (constant noise). Some multi-frequency detectors can cause interference. If you have electrical interference, turn the frequency knob in either direction, then readjust threshold control. You may have to experiment with the frequency adjustments until you are not getting inference. In this setting, volume is set at **HI**.

Most operators will use the **pushbutton** momentary contact switch located on top of the probe. After you have tuned your probe to your liking, move "power on" switch to either **HI** volume, **LO** volume, or **LED**. When the unit is in the LED mode, the audio will be disengaged. The red LED will light up when you get near a target.

WARRANTY

Record Your PistolPROBE:

Date of Purchase:

Dealer Name/Address:

Serial Number:

DetectorPro warrants to the original consumer purchaser that your **DetectorPro PistolPROBE** will be free from defects in materials and workmanship under normal use for two years (24 months) from the original date of purchase. If your DetectorPro PistolPROBE fails due to defects in material or workmanship, DetectorPro will repair or replace at its option all necessary parts without charges for parts or labor.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state. The warranty is non-transferable. Your warranty registration card must be sent in 10 days from date of purchase to validate your warranty.

The warranty excludes batteries and wear on probe housing. Also excluded is a DetectorPro PistolPROBE that has been abused, altered, or repaired by an unauthorized party. Opening the electronics housing and tampering will void warranty.



innovative treasure hunting concepts

1447, Route 44

Pleasant Valley, NY 12569 Phone: 845-635-3488 Fax: 845-635-1838

Email: info@detectorpro.com Web Page: www.detectorpro.com

Tech Support: techsupport@detectorpro.com